622 / 623 Upholstery Installation

NOTE
For ease of installation, place table in prone (flat position).

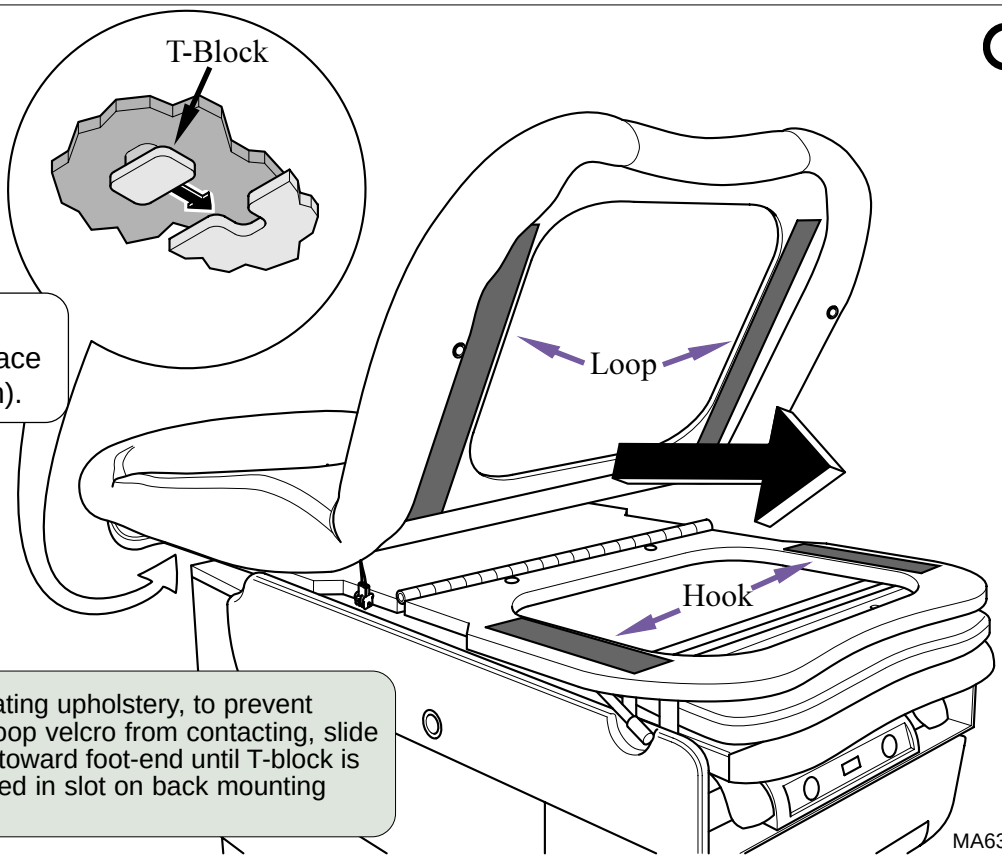

Step 1: While elevating upholstery, to prevent hook and loop velcro from contacting, slide upholstery toward foot-end until T-block is fully engaged in slot on back mounting frame.

MA631600i

Equipment Alert

Assure seat section is centered on mounting frame and, where applicable, upholstery heater harness is not caught between upholstery and frame.

Step 2: Press upholstery firmly in place to assure velcro adheres.

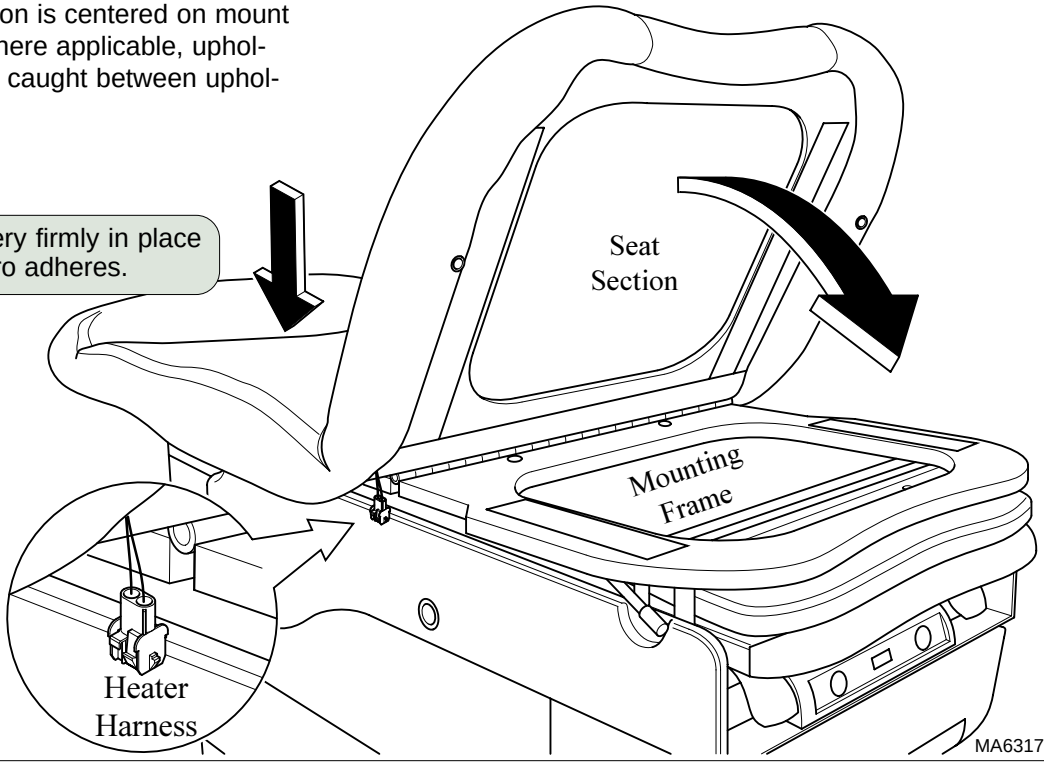

MA631700i

© Midmark Corporation 2003

Equipment Alert

Assure harness is routed to prevent pinching between bumper or mounting screws.

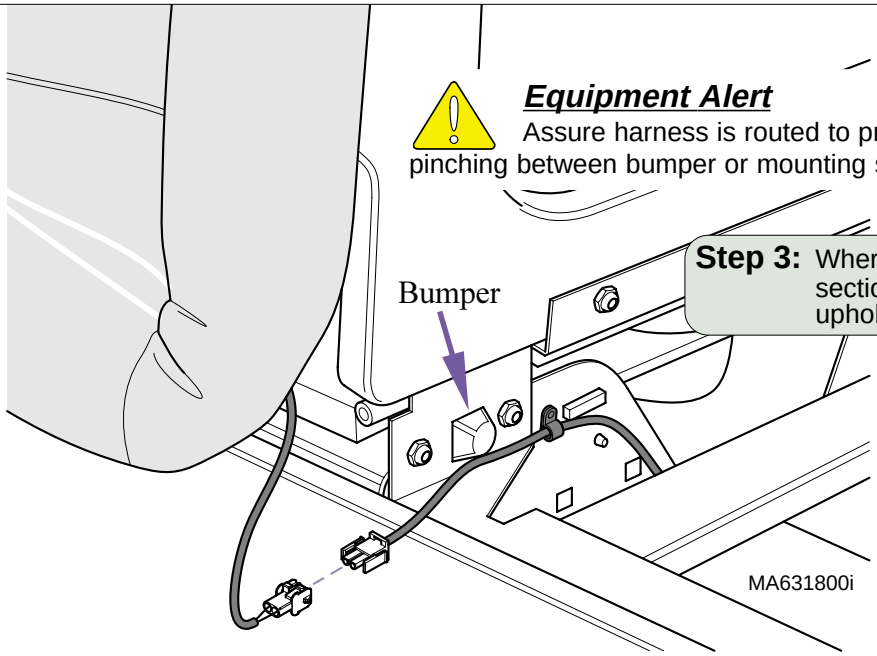

Step 3: Where applicable, lift seat section and connect the upholstery heater harness.

Step 4: Install footrest pad

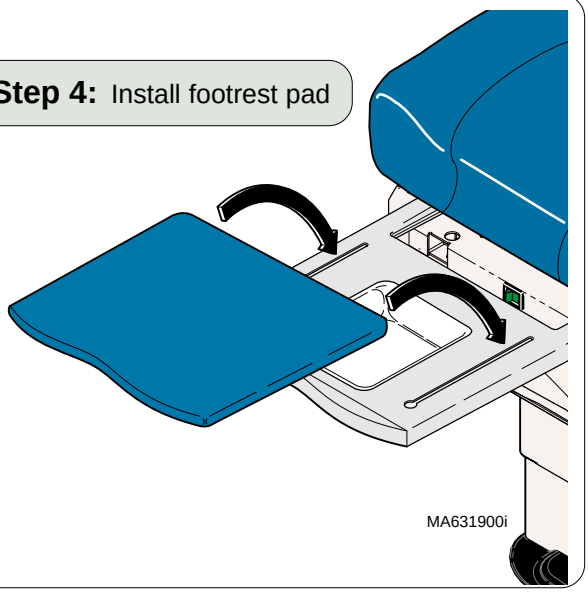

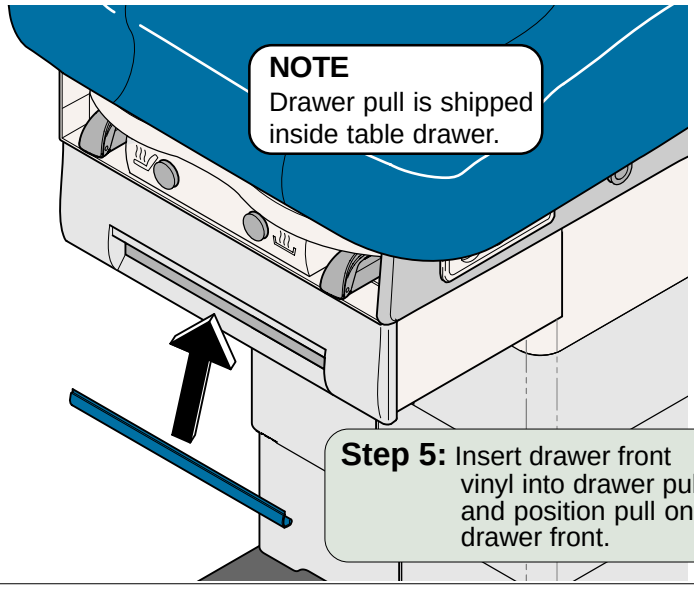

NOTE
Drawer pull is shipped inside table drawer.

Step 5: Insert drawer front vinyl into drawer pull and position pull onto drawer front.

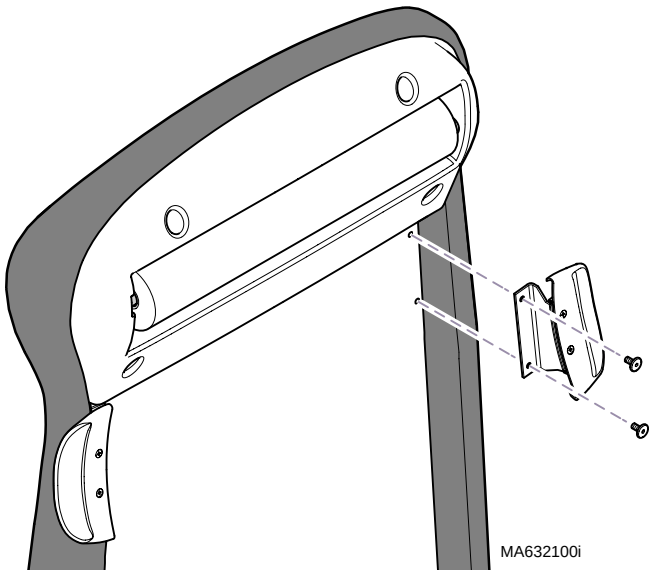

NOTE
If desired, prior to installing the upholstery, the handles can be removed on the model 623 power back tables.

© Midmark Corporation 2003